

TOLERANCE	1	2	OTHERS
	PRECISION	NORMAL	
0 TO 15	± 0.1	± 0.2	± 1.0
15 TO 60	± 0.15	± 0.3	
60 TO 150	± 0.2	± 0.4	± 1.5
150 TO 350	± 0.3	± 0.5	
350 TO 1000	± 0.45	± 0.7	

PACKAGE,ALLOY WOOD,etc.

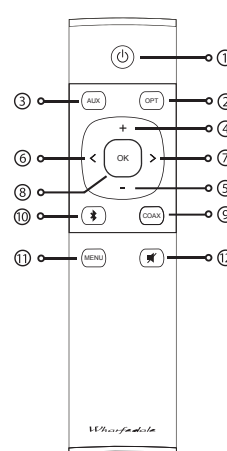 
ANGLE ± 0.5°

7	8
ALT.	DESCRIPTION

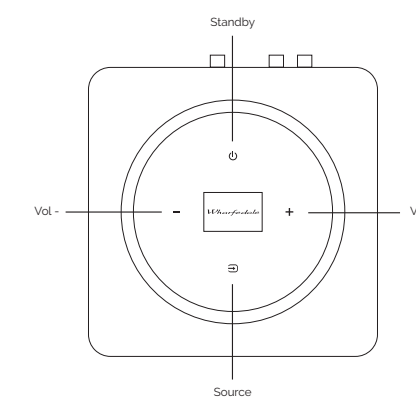 
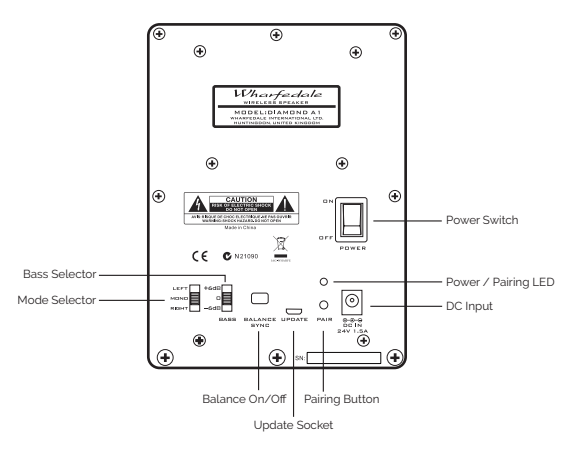 
Diamond Active Quick Start Guide

- Plug in and power-up the Wharfedale Diamond H1 Hub and Wharfedale Active speakers.
- Long press the source button on the Wharfedale Diamond Active H1 Hub, or press the 'Menu' button on the remote.
- Press the source button once more, or the '-' button on the remote, highlighting the 'Enter Pairing Mode' option.
- The Wharfedale Diamond Active H1 Hub will then display 'Searching'.
- Press the 'Balance Sync' button on the rear of one of the Diamond Active speakers. The rear LED will change from flashing to staying on constantly once paired.
- Repeat for each speaker, and set the balance option to left, right or mono as desired.
- You can then connect your audio sources via wired or Bluetooth connections.

For further assistance, please refer to the full user manual, or contact your authorised Wharfedale distributor or dealer. Additional support can be found at www.wharfedale.co.uk.



1	STANDBY	Press to bring the unit in/out of standby	7	>	Next item
2	OPT	Switch to optical input	8	OK	Confirm
3	AUX	Switch to analogue input	9	COAX	Switch to coaxial input
4	+	Increase volume	10	Bluetooth	Switch to bluetooth input
5	-	Decrease volume	11	MENU	Press to enter menu mode
6	<	Previous item	12	Mute	Press to mute/unmute the sound

卡纸后面印刷内容

Quick Start Guide



Wharfedale
DIAMOND ACTIVE
series

IAG House, 13/14 Glebe Road, Huntingdon, Cambridgeshire, PE29 7DL, UK
Tel: +44(0) 1480 452 461 | www.wharfedale.co.uk

卡纸前面印刷内容

技术要求:

1. 规格: 尺寸A5, 205g双铜, 过油, 表面彩印。
2. 印刷颜色必须符合电子档要求。

PART NO.	FINISH:	MAT.	SIGNATURE	DATE:	IAG IAG GROUP LTD
S.TITLE	wharfedale diamond		DWG Rosa	2016-4-28	
TITLE	指示灯说明纸卡		CHK:	SCALE	DWG. NO.
			APP:		ALT. A00